

Ringer Volume

7 levels (high to off) are available.

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "RINGER OPT", then press [▶].

4 Press [▼] repeatedly to display "RINGER VOL", then press [▶].

5 Press [▲] or [▼] repeatedly to select the desired volume, then press [▶].

6 Press [✕⓪].

Note:

- When the ringer volume is set to off, the following will be displayed.



Ringer types for external calls, internal calls, paging or alarm

There are 20 ringer types (6 ringers and 14 melody ringers) available for each item.

"EXT RINGER": For external calls

"INT RINGER": For internal calls

"PAGING": For paging

"ALARM": For alarm

- 1 Press [≡].
- 2 Press [▼] repeatedly to display "SETTING HS", then press [▶].
- 3 Press [▼] repeatedly to display "RINGER OPT", then press [▶].
- 4 Press [▼] repeatedly to display the desired item, then press [▶].

5 Press [▼] repeatedly to select the desired setting from "RING TYPE 1" to "RING TYPE 20", then press [▶].

6 Press [✕⓪].

Note:

- If you select one of the melody ringer types, the ringer will continue to sound for several seconds if the caller hangs up before you answer. You may hear a dial tone or no one on the line when you answer a call.